

MAINTENANCE ITEM		MAINTENANCE INTERVAL									REMARKS
		(Number of months or km (miles) whichever occurs first)									
	Months X 1,000 km X 1,000 miles	3.0	7.5	15	22.5	30	37.5	45	52.5	60	
		4.8	12.0	24	36.0	48	60.0	72	84.0	96	
		3.0	7.5	15	22.5	30	37.5	45	52.5	60	
1	Drive belts (except camshaft) Inspect drive belt tension					I				R	
2	Timing belt (camshaft drive belt)					I*				R	
3	Engine oil	R	R	R	R	R	R	R	R	R	See NOTE 1
4	Engine oil filter	R	R	R	R	R	R	R	R	R	
5	Replace engine coolant and inspect cooling system, hoses & connections					P				P	
6	Replace fuel filter, inspect fuel system, hoses & connections					(P)				P	See NOTE 2, 6 & 7
7	Air cleaner elements					R				R	
8	Spark plugs									R	
9	Differential (Front & Rear) lubricants (gear oil)					I					See NOTE 3
10	Automatic transmission fluid					I					See NOTE 4
11	Brake fluid					R				R	See NOTE 5
12	Disc brake pad and disc. Front and rear axle boots and axle shaft joints			I		I		I		I	See NOTE 6
13	Brake linings and drums (parking brake)					I				I	See NOTE 6
14	Inspect brake line and check operation of parking and service brake system			P		P		P		P	See NOTE 6
15	Steering and suspension			I		I		I		I	See NOTE 6
16	Front and rear wheel bearing lubricant									(I)	
17	Supplemental restraint system	Inspect every 10 years									

* This maintenance operation is required for all states except California. However, we do recommend that this operation be performed on California vehicles as well.

NOTES:

- 1) When the vehicle is used under severe driving conditions such as those mentioned below, ** the engine oil should be changed more often.
- 2) When the vehicle is used in extremely cold or hot weather areas, contamination of the filter may occur and filter replacement should be performed more often.
- 3) When the vehicle is frequently operated under severe driving conditions, replacement should be performed every 48,000 km (30,000 miles).
- 4) When the vehicle is frequently operated under severe driving conditions, replacement should be performed every 24,000 km (15,000 miles).
- 5) When the vehicle is used in high humidity areas or in mountainous areas, change the brake fluid every 24,000 km (15,000 miles) or 15 months, whichever comes first
- 6) When the vehicle is used under severe driving conditions such as those mentioned below, ** inspection should be performed every 12,000 km (7,500 miles) or 7.5 months, whichever comes first.
- 7) This inspection is not required to maintain emission warranty eligibility and it does not affect the manufactures's obligations under EPA's in-use compliance program.

**** Examples of severe driving conditions:**

- | | |
|--|--|
| (1) Repeated short distance driving. (Items 3, 12 and 13 only) | (4) Driving in extremely cold weather. (Items 3 and 15 only) |
| (2) Driving on rough and/or muddy roads. (Items 3 and 15 only) | (5) Driving in areas where road salts or corrosive materials are used. (Items 6, 12, 13, 14 and 15 only) |
| (3) Driving in dusty conditions | (6) Living in coastal areas. (Items 6, 12, 13, 14 and 15 only) |